



Instructions for Use

- Wash before using.
- Owala brand products are designed to be as simple and easy to clean as possible. Best practices for cleaning each part may vary.
- Lid should be disassembled prior to washing, to disassemble, remove slider button (top) from lid, then rotate slider seal (bottom) 90 degrees so piece detaches, then remove the gasket from the lid.
- Lid and components are top rack dishwasher safe.
- Hand washing the cup is recommended to preserve its finish.
- Access additional disassembly and cleaning instructions via QR code.
- To release pressure and open spout, push on slider button, then slide away from spout.
- Do not use harsh chemicals (such as bleach, abrasives, etc.).
- Dry before storing.
- Visit OwalaLife.com for additional information.

Warnings

- Use caution when filled with hot liquids.
- Not for use with carbonated beverages.
- Do not microwave, freeze, or boil.
- In order to minimize bacterial growth, do not use to store warm dairy products, baby food, or other perishable liquids.
- When using with hot liquids, pressure may build up within the cup while the slider is closed and unexpectedly leak or spray out if the slider is opened while the bottle is held at an angle.
- To release pressure, push down on slider button, then slide away from spout to open.
- Always ensure all seals and gaskets are installed and properly sealed before use.
- Always store upright to avoid accidental opening of slider.
- Always use caution and keep out of reach of children when using this product with hot liquids to avoid accidental injury.
- Hot liquids can cause burns.
- Never use this product with liquids hot enough to scald.
- Not for use with dry ice, liquid nitrogen, non-beverages or non-foods.
- To avoid any potential risk of strangulation, never attach to loose clothing or accessories.
- Keep all components not in use out of reach of children.

